





If your TV Mount looks like this. Then it could be one of the below models. The TV removal process is basically the same.

U-Series Models: U40, U42, U50, U70  
Tilt Models: VTM, VTL, VTX


### So, how do I remove my TV from the TV Wall Mount that I have mounted on my wall ?

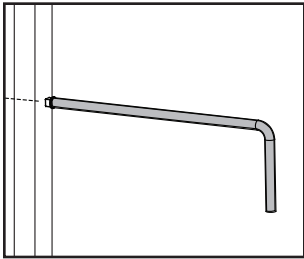


1. Do you still have the L-Wrench or Lock - unlock Tool? It looks like this. If not The L-Wrench or Lock-unlock Tool has the same hex as a 3/8" ratchet found in most do it yourselfer socket set tool kits. We recommend you also use the small extension that comes with most socket sets this will give you more room to get the tool into the hex behind the TV.

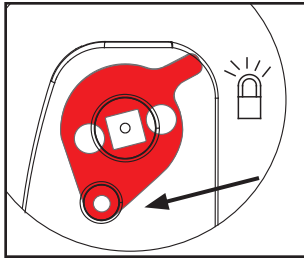


2. While standing on the right hand side of the TV (as your facing it) Locate the Plastic side covers that say Vantage Point. Look for the Small Holes, just below the Red Square Hex, make sure there are no Phillips Head Screws or Tamper Proof Screws installed there. If there are, they need to be removed. Check both sides.

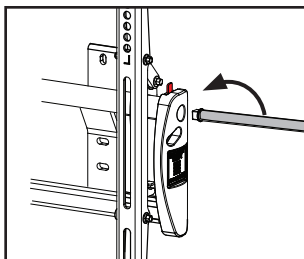

3. Standing on the right hand side of TV (as your facing it) Insert the square end of the extension into the square hex, rotate counter clockwise approx 1/8 of a turn - the upper bar will rotate about an 1/8 of turn then stop.

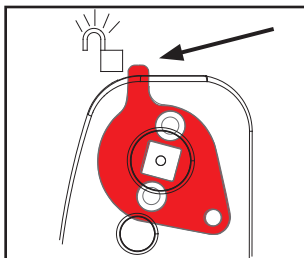

4. Once unlocked, you will see a Red Tab stand straight up at the top of the plastic side cover. This function unlocks both sides as the upper bar is one piece. The TV is still safely hooked on the rail system but can now be removed.

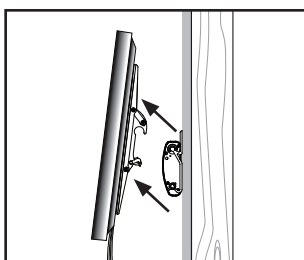

5. Depending on the size and weight of your TV you may want assistance. It is now safe for you to carefully lift the TV upward and outward off the rails. Beware any cable connections that may still be attached as you remove the TV.