


FLAT PANEL ADHESIVE MOUNTING PAD INSTALLATION INSTRUCTIONS

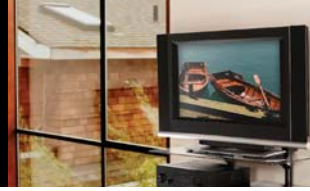

Model: AMP01



Pads can be cut into various shapes that best accommodate the base of your TV.



Gain access to the bottom of the TV base. Use caution to protect the face or screen of the TV.




Remove any foot pads or screws that may interfere with obtaining the flattest surface possible.



Base shown with all surface obstructions removed.



Clean base and mounting surface with provided Alcohol Wipe.

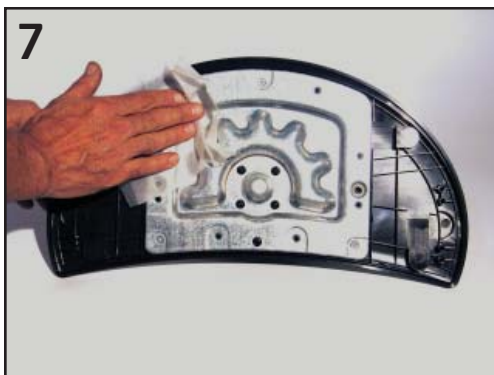

Make sure both surfaces are clean of any furniture polish residue or finger prints. This will insure good adhesion.



Install Adhesive mounting pads in configuration that best fits your TV Base. Always try and mount to the steel component of the base.



Remove Adhesive pad cover and carefully position TV. Apply slight downward pressure on base to insure proper contact to both surfaces.